


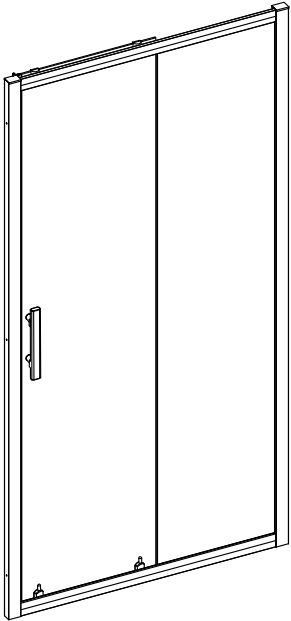
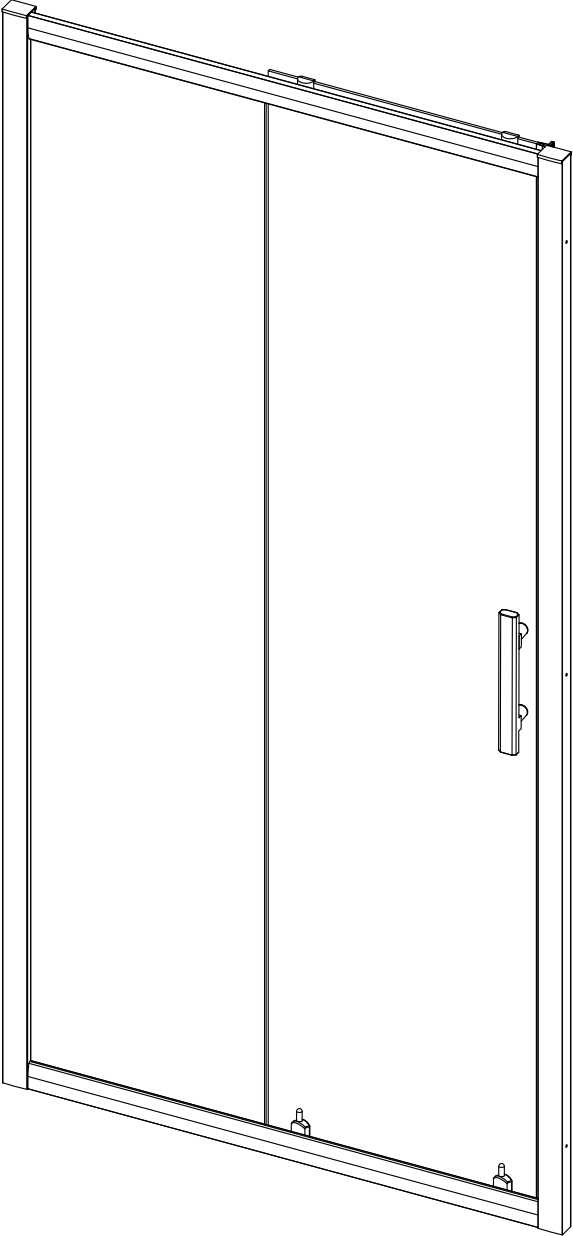
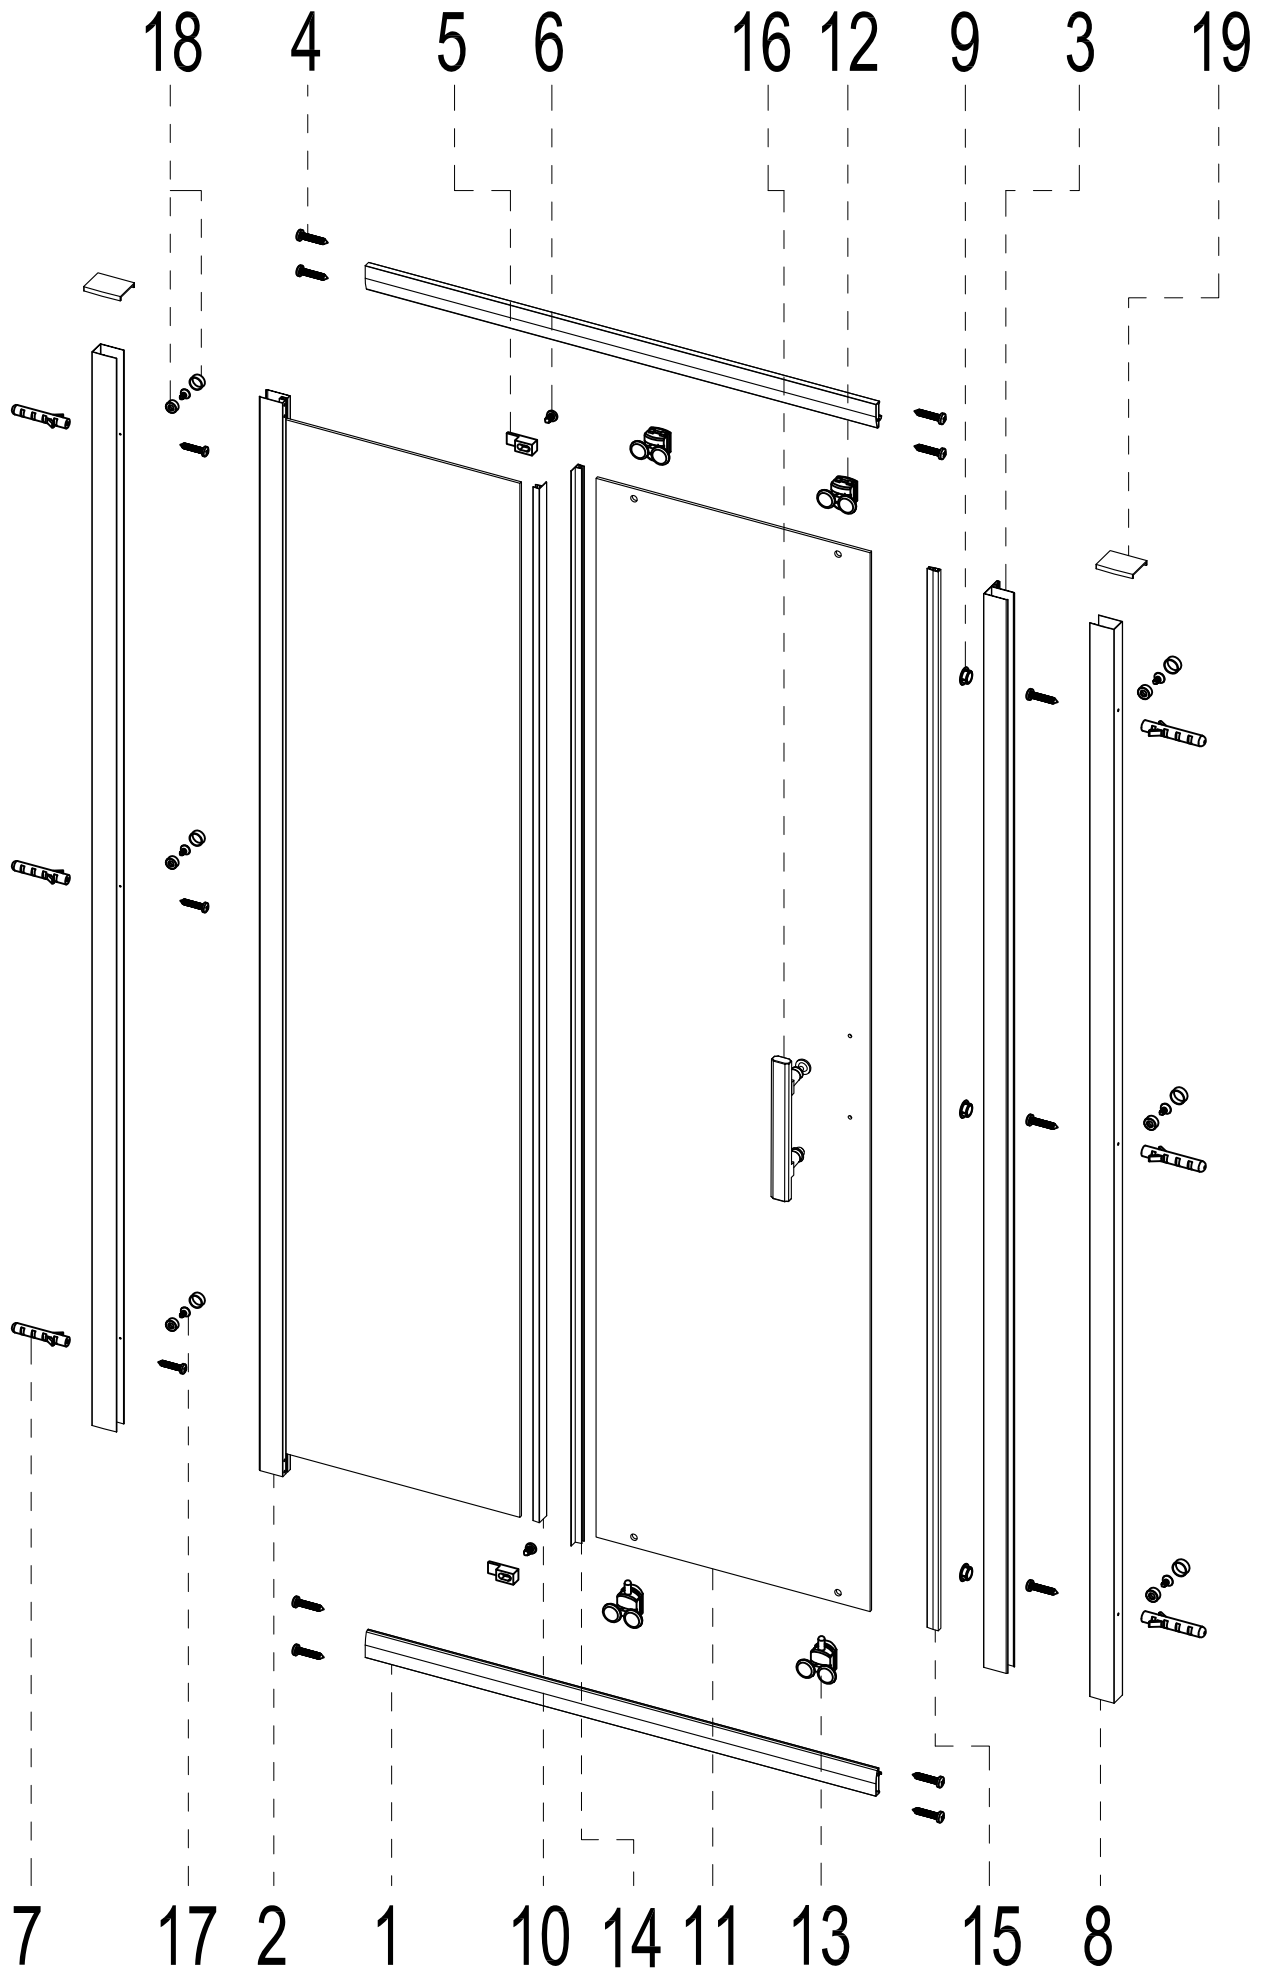








Aqua i
Shower Enclosures


























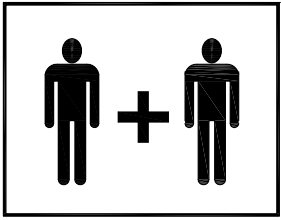





Ø6mm



Ø2.8mm

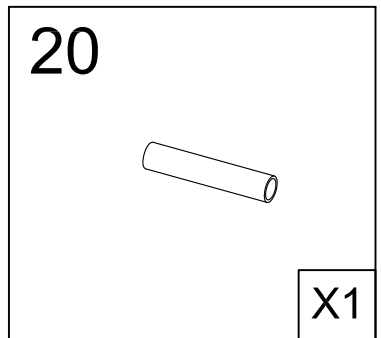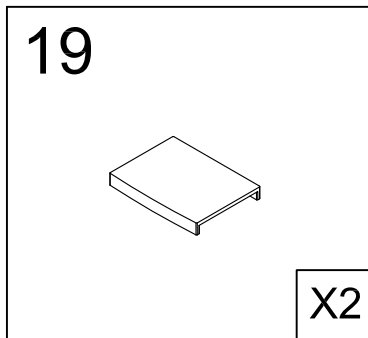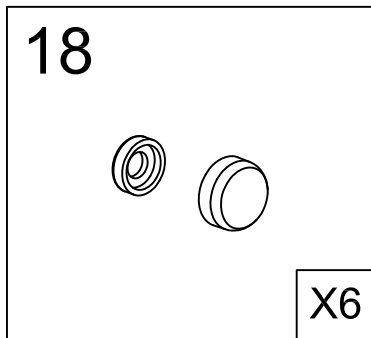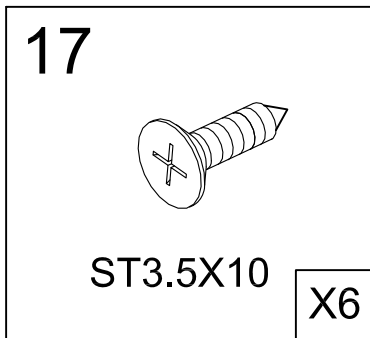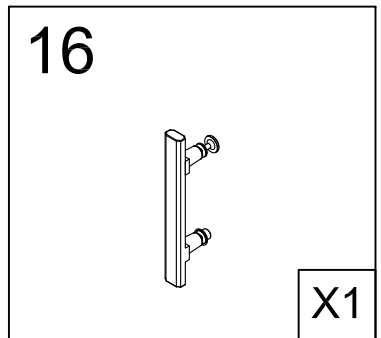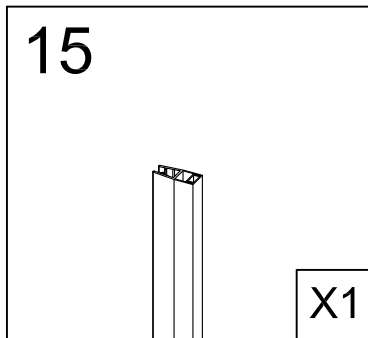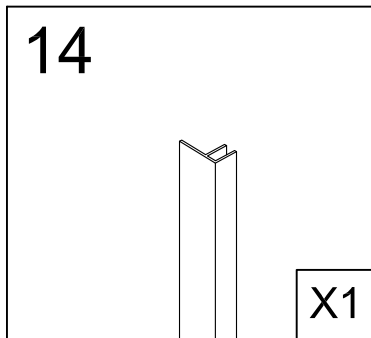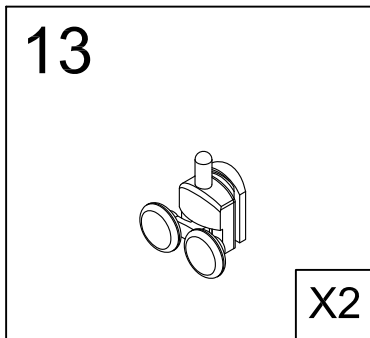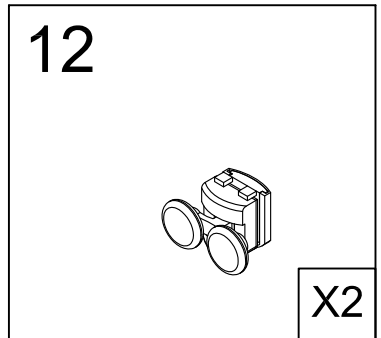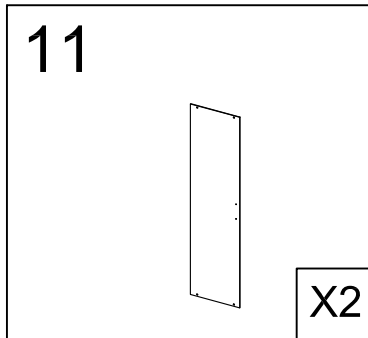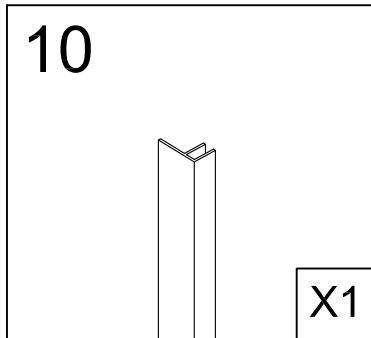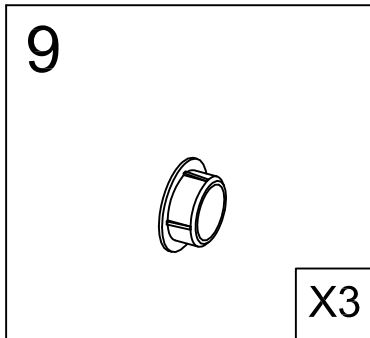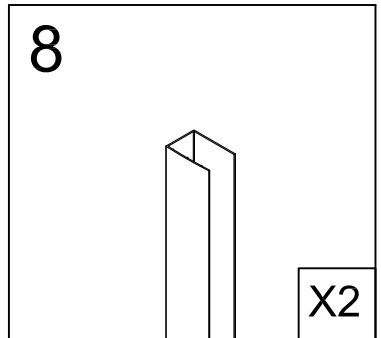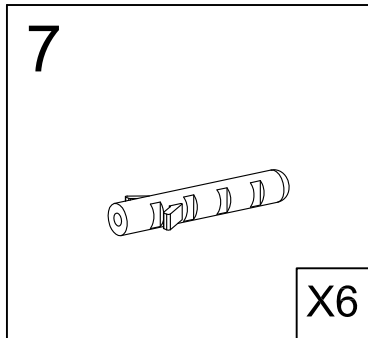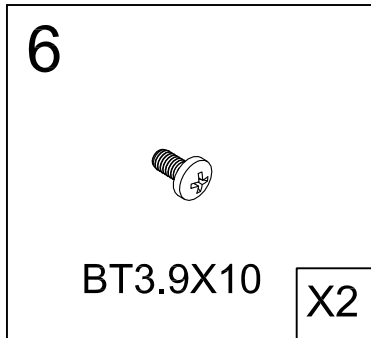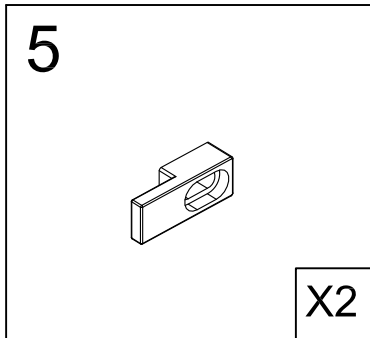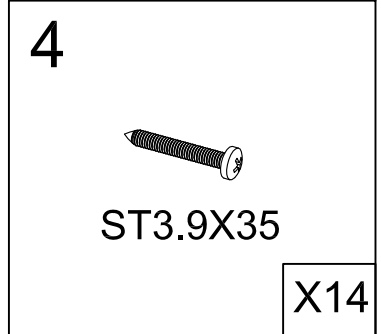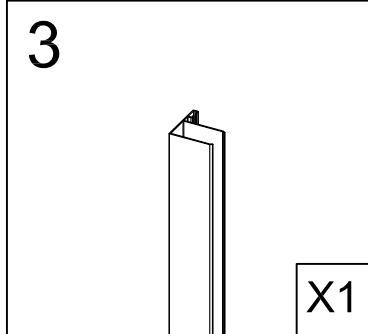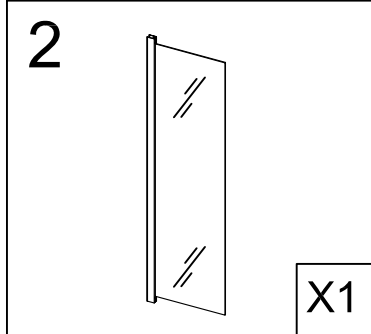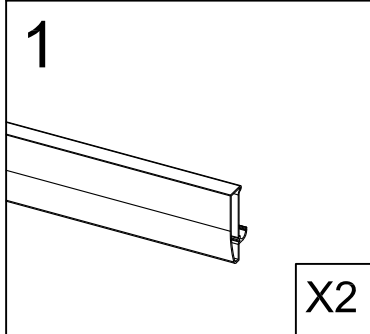




1 X2	2 X1	3 X1	4 ST3.9X35 X8	5 X2	6 BT3.9X10 X2
-------------	-------------	-------------	-------------------------	-------------	-------------------------

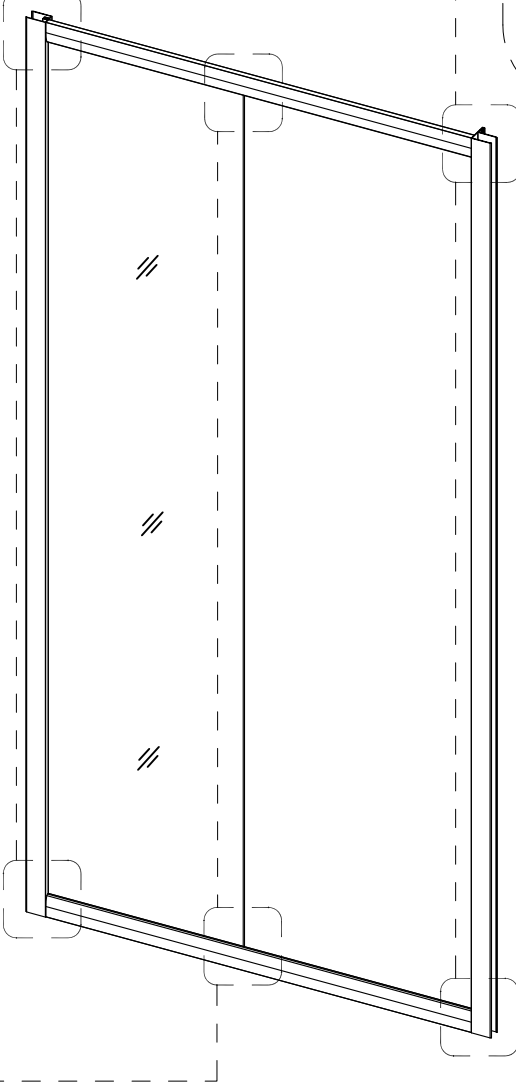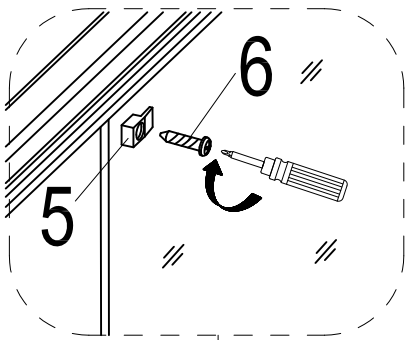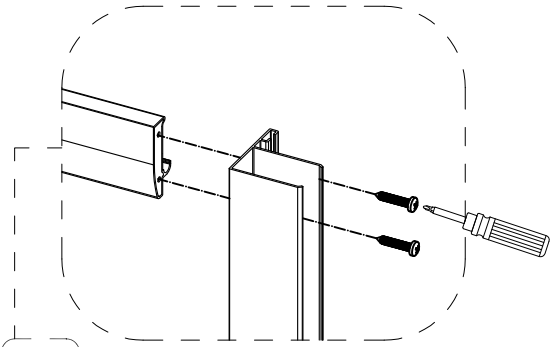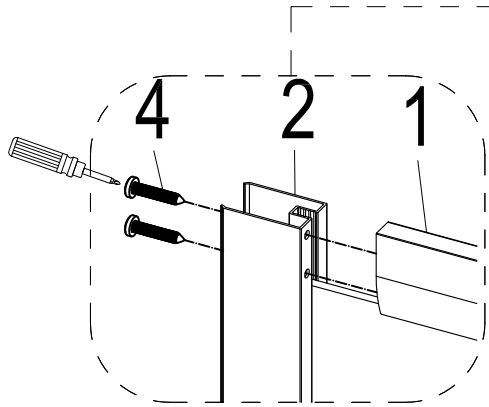







Ø6mm


7




X6

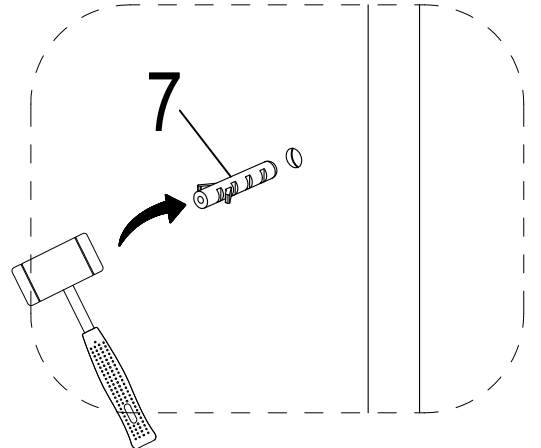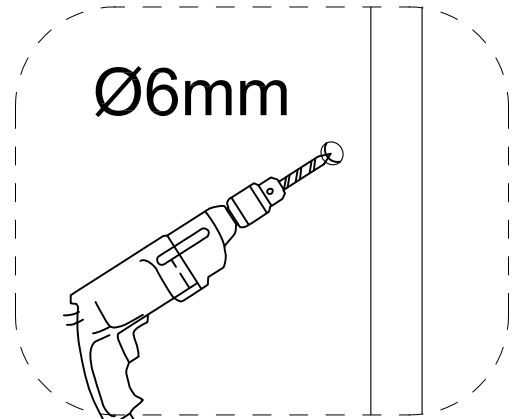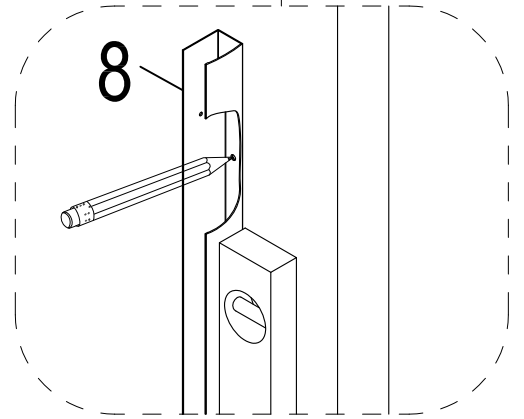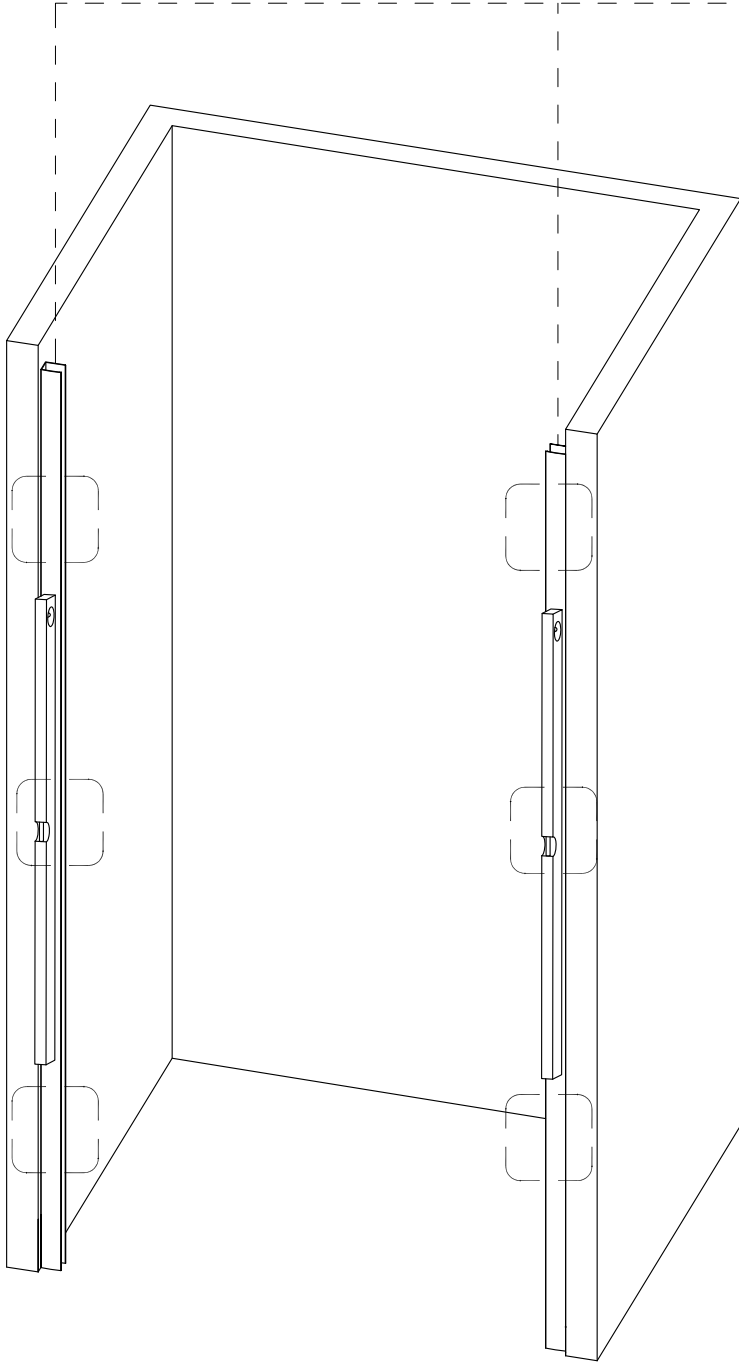

5



8






X1


4




ST3.9X35

X3

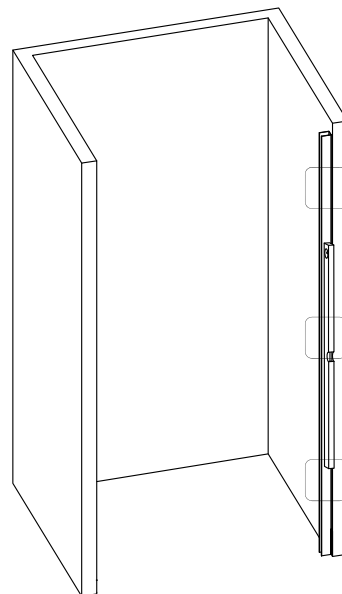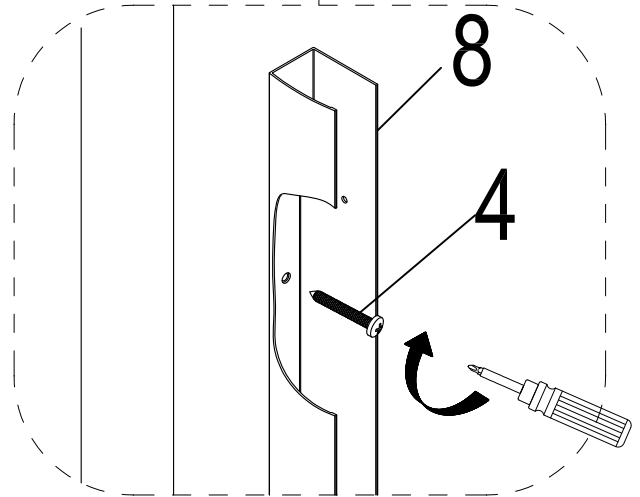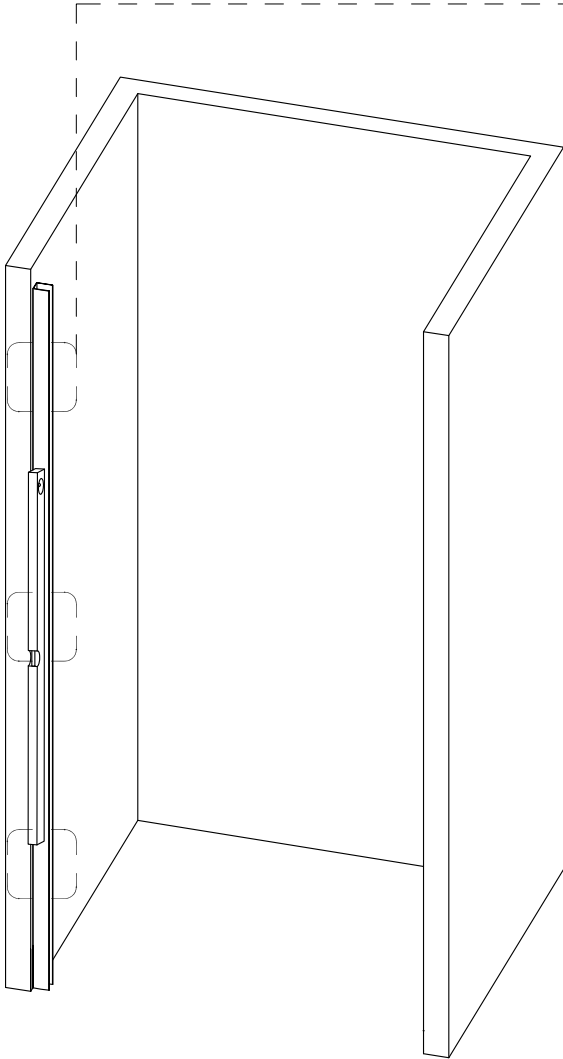



8




X1

9



X3

4



ST3.9X35


X3

10

















X1

20



X1

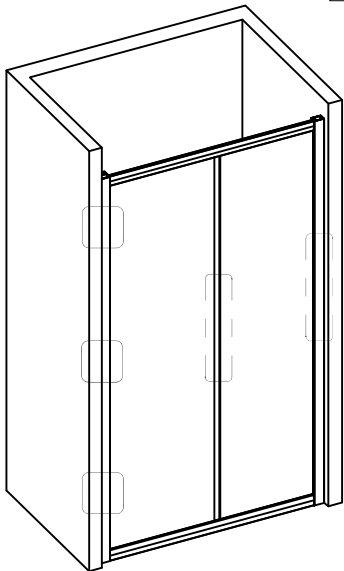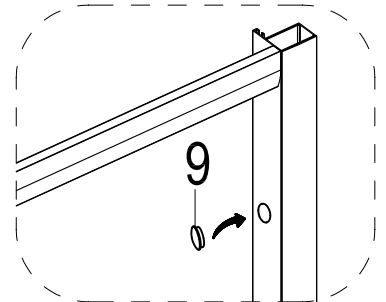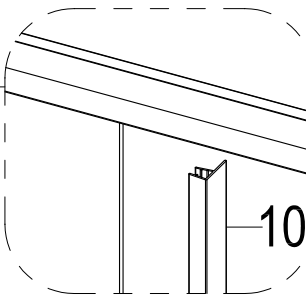
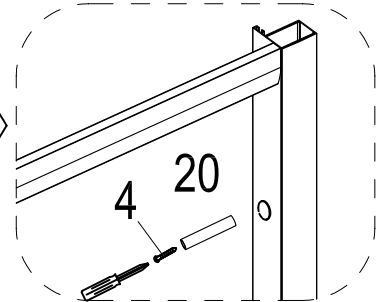
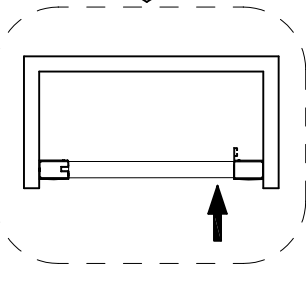
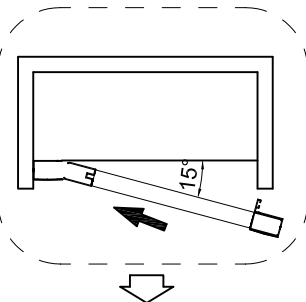
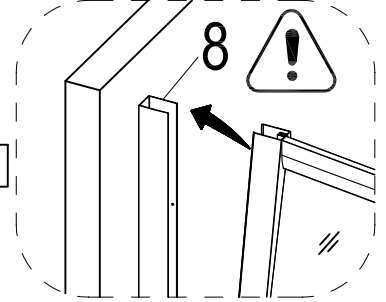
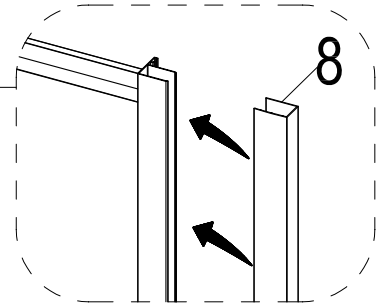
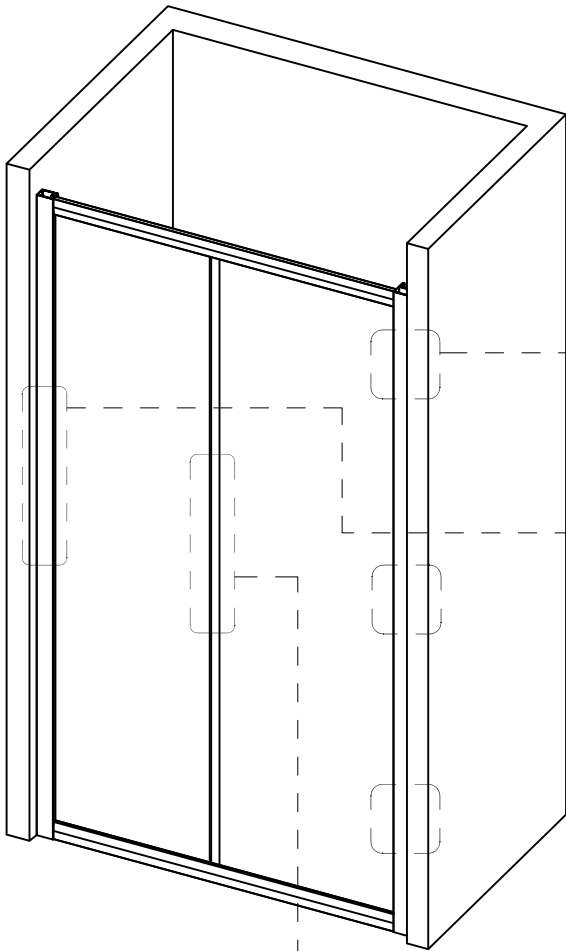


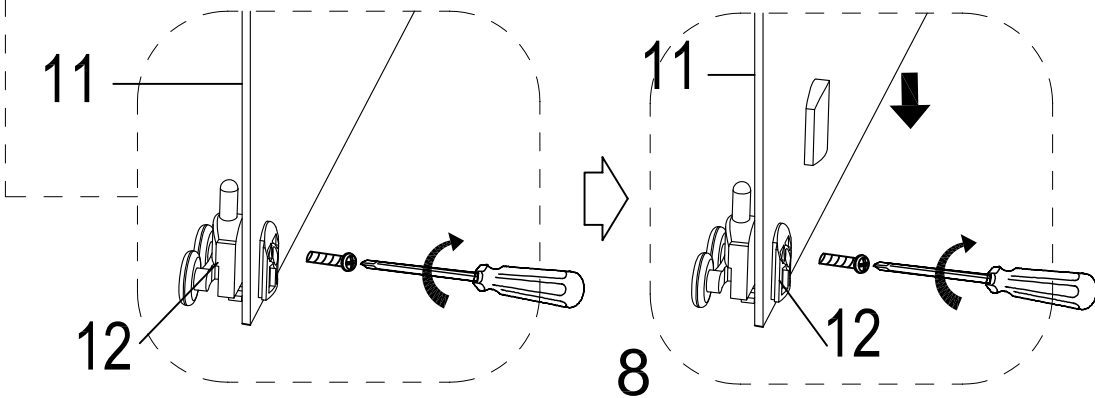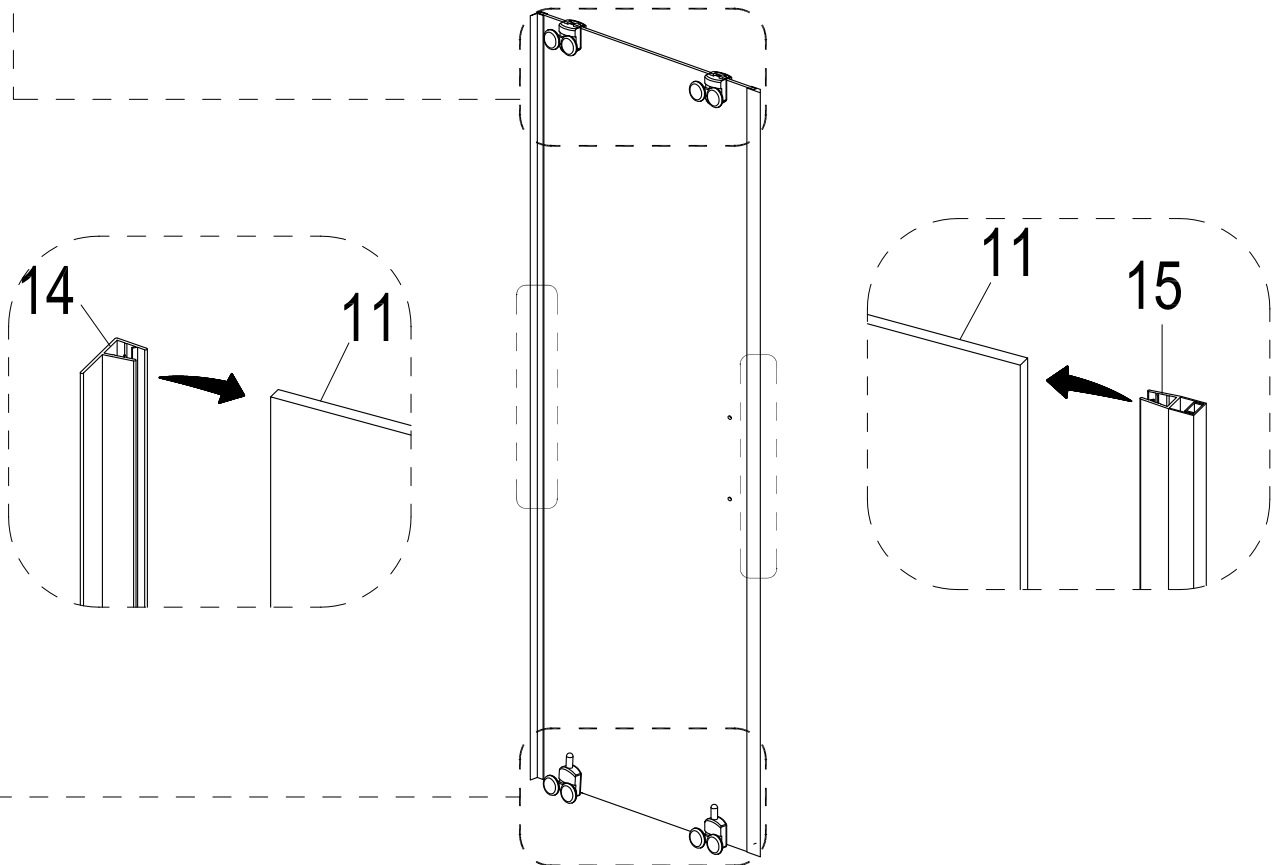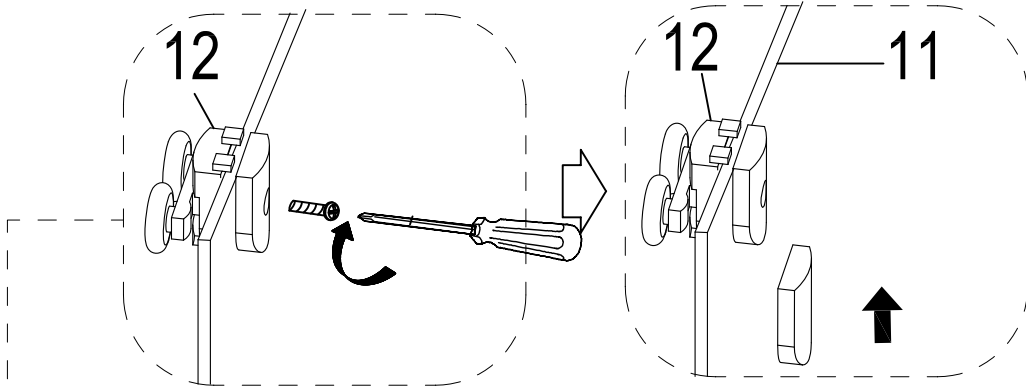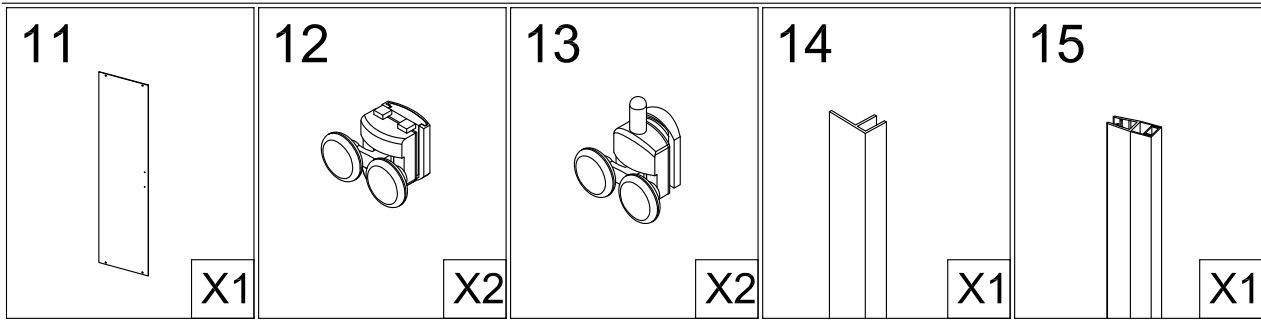



16




X1

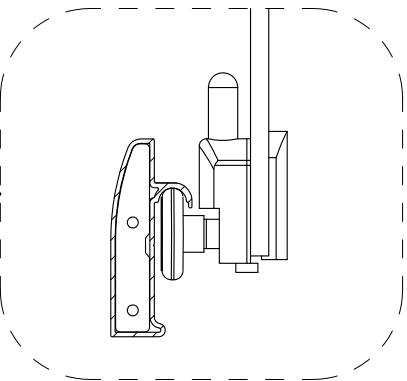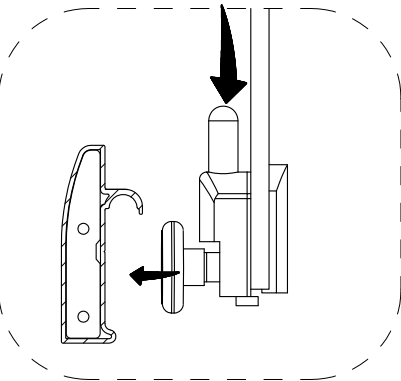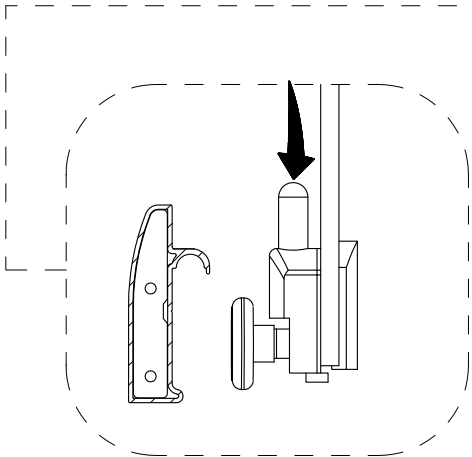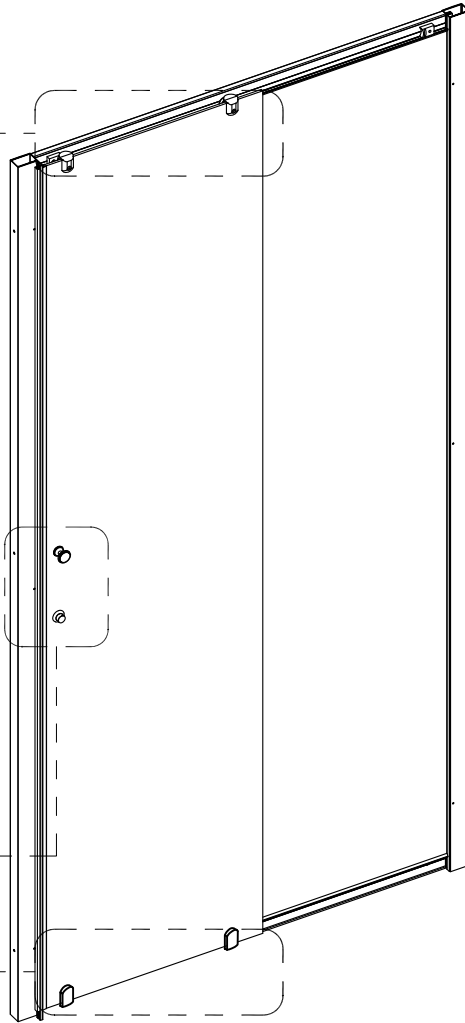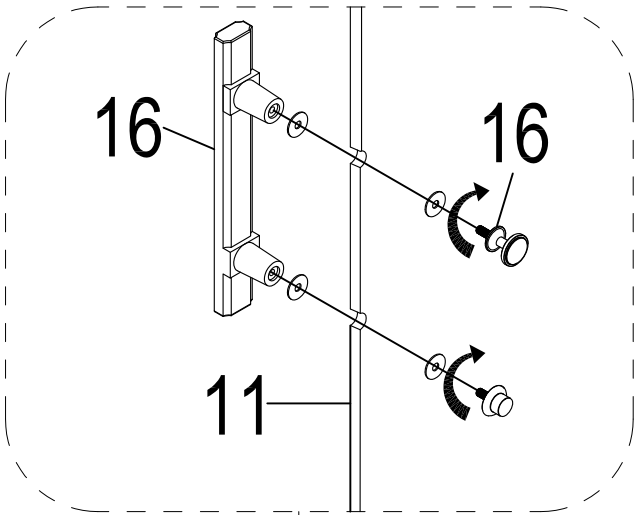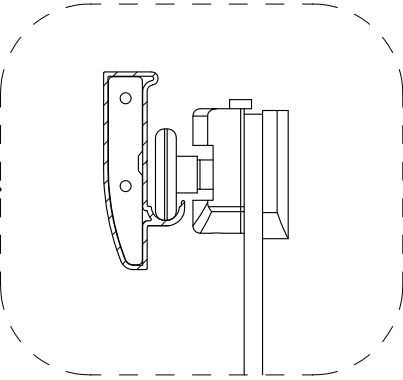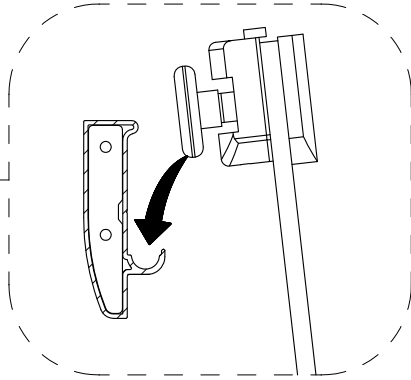




17






ST3.5X10

X6

18





X6

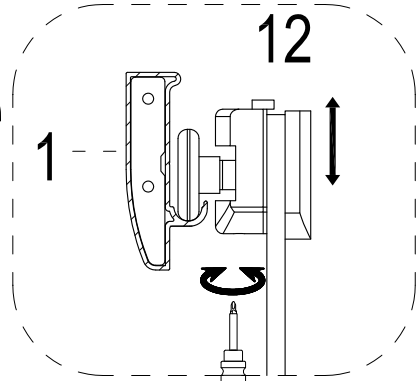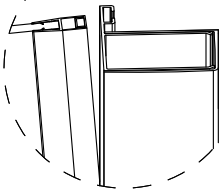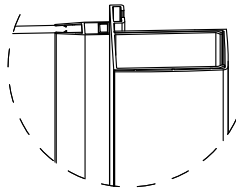


12

1

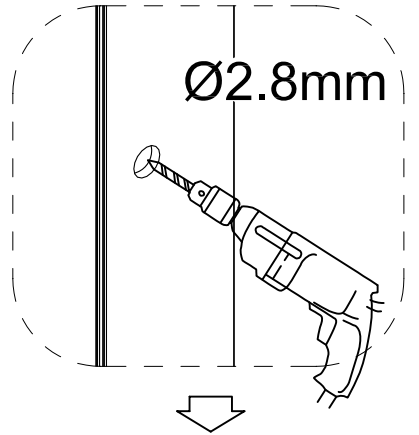


Ø2.8mm

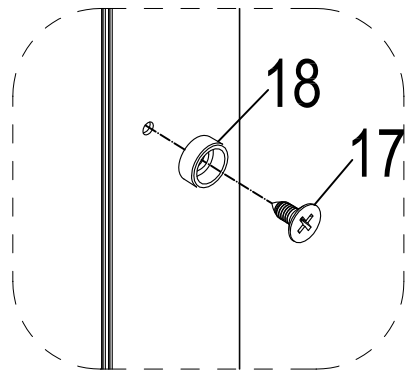


18


17

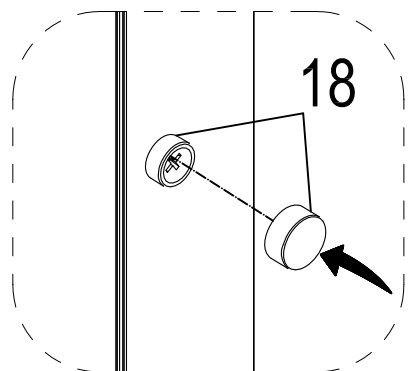

18

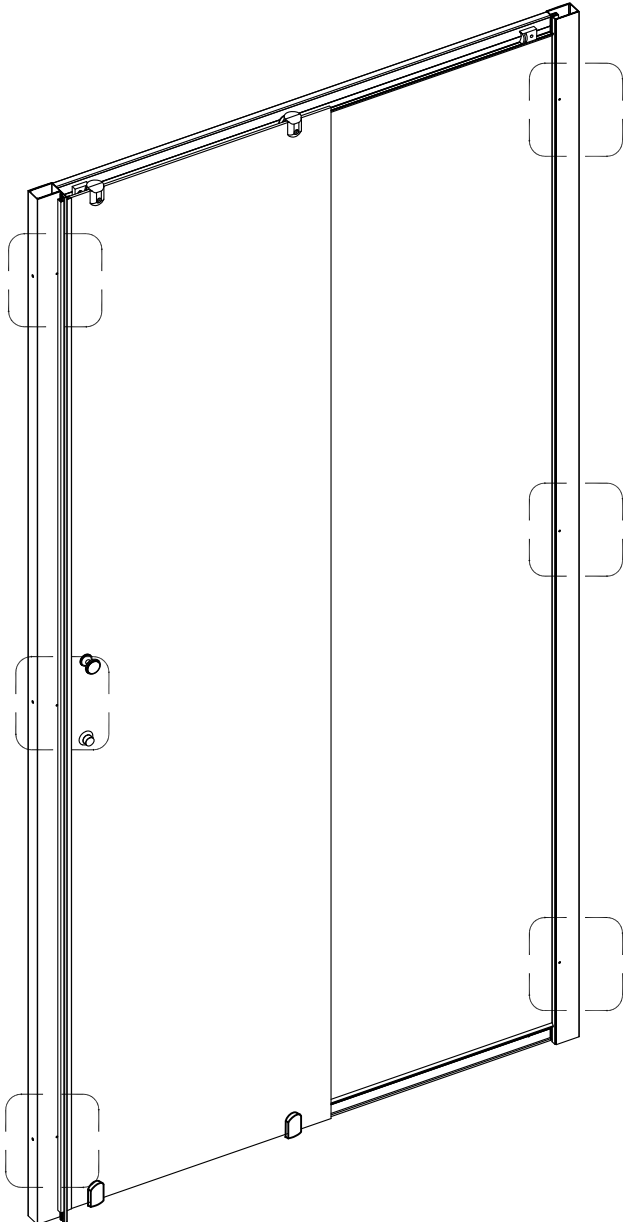

19



X2

